


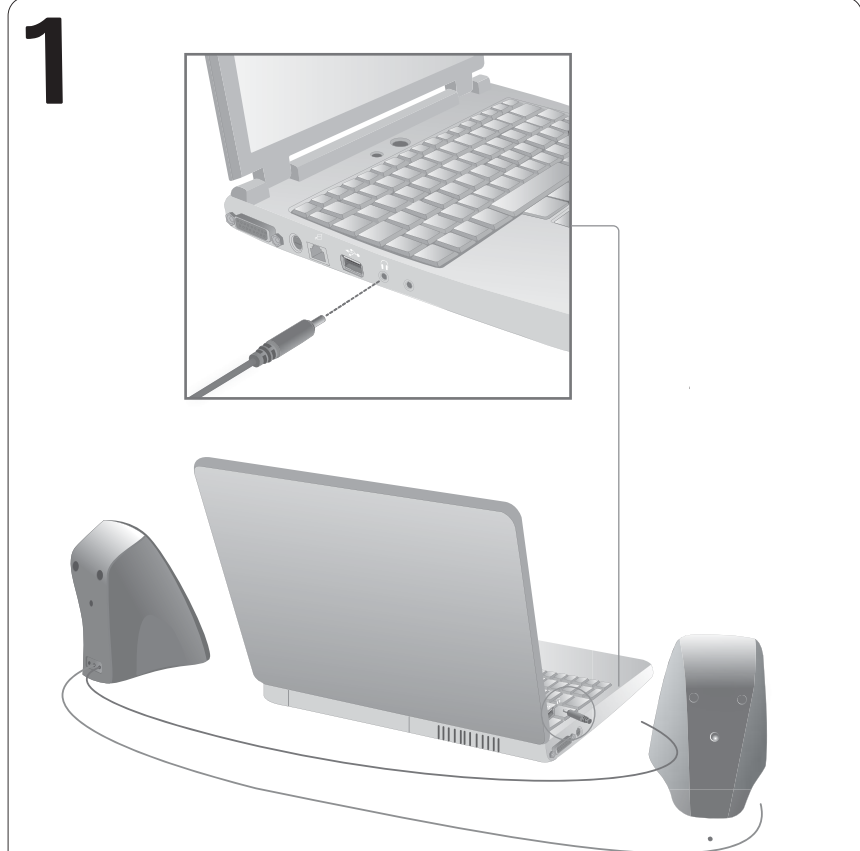

Model: S-00098



2

English
Connect power to right speaker.

한국어
오른쪽 스피커에 전원을 연결합니다.

繁體中文
將電源線連接到右邊的音箱。
電氣規格：10 V $\overline{\text{~}}$ 700 mA

3

English
1. Turn on computer.
2. Launch media player.

한국어
1. 컴퓨터를 켭니다.
2. 미디어 플레이어를 실행합니다.

繁體中文
1. 開啟電腦電源。
2. 啟動媒體播放器。

English

- Place your speakers.
- Connect the speaker cable to your computer's audio jack. Use either the line-level, speaker, or headphone output.

한국어

- 스피커를 놓습니다.
- 스피커 케이블을 컴퓨터의 오디오 잭에 연결합니다. 라인 레벨, 스피커 또는 헤드폰 출력을 사용합니다.

繁體中文

- 放好音箱。
- 將音箱連接線連接到電腦的音訊插孔。可使用線性輸出、音箱輸出或耳機輸出的任一插孔。

4

English
Adjust volume. For more assistance, see **Help with setup**.

한국어
볼륨을 조정합니다. 자세한 내용은 **설치 도움말**을 참조하십시오.

繁體中文
調整音量。如需詳細的協助，請參閱「安裝說明」。

5

English
Connect optional headphones that have a 3.5 mm connector. Speakers mute automatically. Adjust headphone volume using speaker volume control.

한국어
3.5 mm 커넥터가 있는 옵션 헤드폰을 연결합니다. 스피커는 자동으로 음소거됩니다. 스피커 볼륨 컨트롤을 사용하여 헤드폰 볼륨을 조정합니다.

繁體中文
連接 3.5 mm 接頭的耳機。音箱會自動靜音。使用音箱音量旋鈕調整耳機音量。

Help with Setup 安裝說明 설치 도움말

English

One or both speakers produce little or no sound?

- Check the power connection to the right speaker. Try a different AC outlet. Rotate the speaker volume knob to the 12 o'clock position.
- Check the speaker cable connection with your computer. The speaker cable must be plugged into the line-level, speaker, or headphone output jack.
- Check volume and balance controls in your media application and computer's operating system.
- Quit your media application, and then restart it.
- Connect the speakers to another audio source (e.g., MP3 player). If they work, your computer's soundcard may be the cause of the problem.

Checking operating system volume/balance controls

- Windows® Vista and Windows® 7:** Go to **Start/Control Panel/Sounds/Playback Devices** tab. Select your soundcard as the sound playback device. Verify that the Speaker Icon is not muted.
- Windows® 8:** From Start Menu, select Desktop tile. From Charms menu, select **Settings/Control Panel/Hardware and Sound/Sound/Playback devices** tab. Select your soundcard as the sound playback device. Verify that the Speaker Icon is not muted.
- Mac OS® X:** Open **System Preferences** and select **Sound/Output** tab. Select your soundcard as the sound output device and adjust the Output Volume slider. Verify that the Mute box is not checked.